



THIS MANUAL IS AVAILABLE FOR FREE
COMPLIMENTS OF

BUYMEBUYME.COM

**TO ORDER THIS PRODUCT, PLEASE CALL TOLL-FREE
1-877-992-8963 OR VISIT WWW.BUYMEBUYME.COM**

Additional Features & Tips

For more usage tips and safety information, please refer to the FoodSaver Reference Guide or visit our website at www.foodsaver.com.

Removable Drip Tray

The Removable Drip Tray (**G**) fits inside Vacuum Channel (**D**), making cleanup easy when small amounts of liquids are inadvertently pulled into Vacuum Channel during vacuum process (see *FoodSaver Reference Guide* for tips on preventing this).

Place Drip Tray into Vacuum Channel. Two bag guides in Drip Tray help correctly position FoodSaver Bags when vacuum packaging. Slip open end of bag into guides before closing lid and vacuum packaging. After each use, empty Drip Tray and wash in warm soapy water or place on top rack of dishwasher. Appliance can be used without Drip Tray.

Tips on Sealing a Bag

Make sure you've placed the bag in the proper place. When making a bag from a roll, make sure end of cut piece is on Sealing Strip, not over rubber gasket or in Vacuum Channel.

Prevent moisture or liquid from being pulled into the Vacuum Channel or trapped in the seal. Either pre-freeze moist foods such as raw meat for 1-2 hours before vacuum packaging, or place a folded paper towel between food and end of bag to absorb excess liquids. Just be sure to leave at least 3 inches

between paper towel and end of bag so that bag seals properly with paper towel inside.

Make sure the Vacuum Mode Switch (on V375 only) is set to Vacuum and Seal.

Make sure you give appliance time to cool down. Wait at least 20 seconds between seals. Under very heavy usage, appliance will shut off automatically to prevent overheating. If it does, wait 20 minutes to allow appliance to cool off.

Tips on Removing Air from a Bag

Make sure you've placed the bag in the proper place. When vacuuming and sealing a bag, make sure open end of bag is inside Vacuum Channel.

Check for wrinkles in the bag along the Sealing Strip. Wrinkles in seal may cause leakage and allow air to come back into bag. Check for wrinkles in bag along Sealing Strip before closing lid and vacuum packaging. If you find wrinkles after sealing bag, simply cut bag open and vacuum package again.

If motor runs for more than 30 seconds without stopping, you may need to adjust bag and try again. If you are making initial seal on a piece of bag material with two open ends, make sure bag is placed on Sealing Strip, not on black rubber gasket. If you are vacuum packaging with a bag, make sure open end is placed down inside Vacuum Channel and make sure Accessory Hose is not attached. If you are vacuum packaging with an accessory, check Accessory Hose in appliance lid and in accessory to ensure a tight fit. (On V375, also make sure Vacuum Mode Switch (**C**) is set to **Vacuum and Seal**.)

Copyright © 2004 Tilia, Inc. All rights reserved. This material may not be reproduced or redistributed in any fashion without the express written consent of Tilia, Inc. FoodSaver and the Freshness Shield logo are trademarks or registered trademarks of Tilia Int'l, Inc. in the United States and other countries. All other trademarks are property of their respective owners. Tilia, Inc. and Tilia Int'l, Inc. are Jarden companies. This product is protected by one or more of the following Patents: U.S. RE 34,929; 4,660,355; 4,941,310; 5,655,357; 6,058,998; 6,256,968; Canada 1,315,746; and their equivalent international patents. Other patents pending.



FoodSaver®

QuickStart

V365/V375


Shown V375; V365 operates in the same manner.

Features of Your FoodSaver Appliance



- A** Accessory Port
- B** Open/Cancel Button

- C** Vacuum Mode Switch (V375 only)

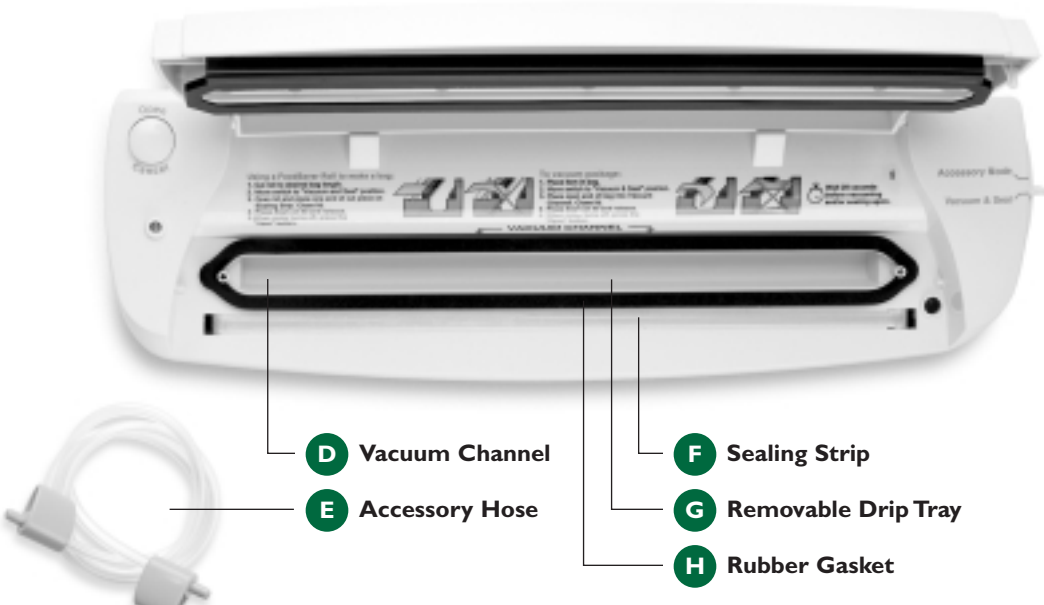

- D** Vacuum Channel
- E** Accessory Hose

- F** Sealing Strip
- G** Removable Drip Tray
- H** Rubber Gasket

For important safety information and helpful tips, please refer to the *FoodSaver Reference Guide* included in your kit. Questions? Visit us at www.foodsaver.com or call 1-800-777-5452 (U.S.) or 1-877-804-5383 (Canada), Mon-Fri 8am-8pm, Sat 9am-6pm EST. Get tips on vacuum packaging and order FoodSaver accessories.

Features

Getting Started

Registering your appliance is quick and easy at www.foodsaver.com.

How to Make a Bag from a FoodSaver Roll



Place Bag on Sealing Strip



Set Vacuum Mode Switch



Press and Release Lid

1. Cut enough bag material from roll to hold item to be vacuum packaged, plus 3 inches. Be sure to cut a straight line.
 2. Open appliance lid and place one end of bag material across Sealing Strip **(F)**, not over black rubber gasket **(H)**.
 3. Close lid. (On V375 only, set Vacuum Mode Switch **(C)** to **Vacuum and Seal**.)
 4. Press down firmly on lid with both hands until motor starts, wait 3-5 seconds, then release. Motor will continue to run.
 5. When motor turns off, press the Open/Cancel Button **(B)** to open lid and remove bag.
- Now you are ready to vacuum package with your new bag (see below).

How to Vacuum Package with FoodSaver Bags



Place Bag in Vacuum Channel



Set Vacuum Mode Switch



Press and Release Lid

1. Place item(s) in bag, allowing at least 3 inches of space between bag contents and top of bag.
 2. Open appliance lid and place open end of bag down into Vacuum Channel **(D)**.
 3. Close lid. (On V375 only, set Vacuum Mode Switch **(C)** to **Vacuum and Seal**.)
 4. To begin vacuum process, press down firmly on lid with both hands until motor starts, wait 3-5 seconds, then release. Motor will continue to run.
 5. When motor turns off, press the Open/Cancel Button **(B)** to open lid and remove bag. Refrigerate or freeze if needed. (See *FoodSaver Reference Guide* for food safety tips.)
- Tip:** The Open/Cancel Button can also be used to cancel vacuum process mid-way and open lid.
- Note:** Let appliance cool down for 20 seconds after each use.

Rolls
&
Bags

FoodSaver Accessories

Accessories include FoodSaver Vacuum Packaging Canisters, Universal Lids, Jar Sealers and Bottle Stoppers.

FoodSaver Accessory Guidelines

1. Always leave at least one inch of space between contents and rim.
2. Wipe rim of canister, container or bottle to ensure it is clean and dry.
3. Place lid on canister or container, or place stopper in bottle.
4. For accessories with a large knob on lid, turn knob to **Vacuum**. Vacuum package using instructions below. When vacuum process is complete, turn knob to **Closed** before removing Accessory Hose.
5. For accessories without a large knob on lid, vacuum package using instructions below.

How to Vacuum Package with FoodSaver Accessories



Insert Accessory Hose



Set Vacuum Mode Switch



Press and Release Lid

1. Prepare container according to FoodSaver Accessory Guidelines above.
2. Insert one end of Accessory Hose (**E**) into Accessory Port (**A**) on appliance. Insert other end into port on accessory. Twist gray tab while inserting to ensure a tight fit.
3. (On V375 only, set Vacuum Mode Switch (**C**) to **Accessory Mode**.)
4. To begin vacuum process, press down firmly on lid until motor starts, wait 3-5 seconds, then release.
Motor will continue to run.
5. When motor turns off, vacuum process is complete.
6. Gently twist and remove Accessory Hose from accessory and appliance.
7. To test vacuum, simply tug on accessory lid. It should not move.

Note: For important tips on using accessories with different foods, please refer to the *FoodSaver Reference Guide*.

How to Open FoodSaver Accessories after Vacuum Packaging

FoodSaver Vacuum Packaging Canisters (without large knob on lid)

To release vacuum and open, push gray rubber button on lid.

FoodSaver Bulk Canisters and Quick Marinators (with large knob on lid) and Universal Lids

To release vacuum and open, turn knob on lid to **Open**.

FoodSaver Jar Sealer with Mason Jars

For use with Ball® and Kerr® brand Mason jars.

IMPORTANT: Do NOT use screw bands when vacuum packaging jars. To open, wedge spoon between Mason jar lid and highest part of threaded rim. Twist spoon gently to release vacuum.

FoodSaver Bottle Stoppers

To release vacuum and open, simply twist and pull up on Bottle Stopper.